

QUICK START

1. VERIFICATION OF DEVICE SELECTION



ATTENTION



SEE

 


OSCILLOSCOPE



MANUAL

CRANKSHAFT



→ TAP-03/1



→ TAP-03/2

CAMSHAFT



→ TAP-03/1/
TAP-03/2



2. VERIFICATION OF IGNITION SYSTEM



ATTENTION







SEE



SPARK PLUGS, IGNITION WIRES

3. VERIFICATION OF CORRECT ASSEMBLY

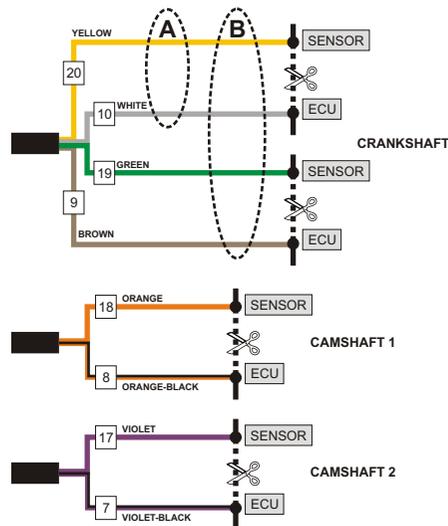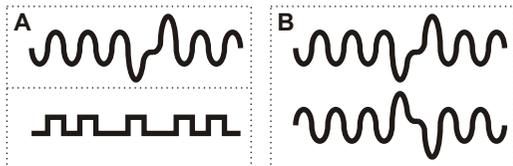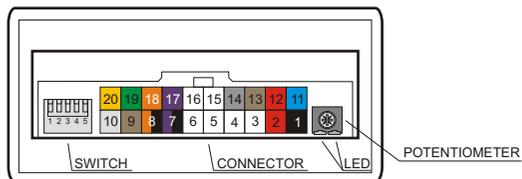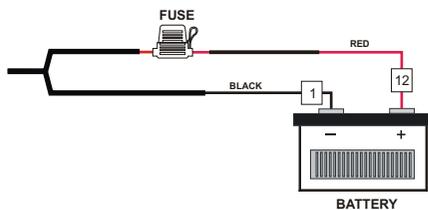

4. SELECTION OF AUTO-CALIBRATION TYPE

MANUALLY



SET SWITCH No. 4



A) START THE ENGINE



B) PB (leave on petrol)

C) SWITCH OFF VENTILATION, AIR CONDITIONING AND LET THE ENGINE WARM UP



D) LOWER SWITCH No. 5



E) GREEN LED FLASHES



F) WAIT



G) LED OFF - AUTO-CALIBRATION COMPLETE



H) LIFT SWITCH No. 5



USING A COMPUTER



SET SWITCH No. 4



A) START THE ENGINE



B) PB (leave on petrol)

C) SWITCH OFF VENTILATION, AIR CONDITIONING AND LET THE ENGINE WARM UP



D) SELECT FUEL TYPE IN APPLICATION

E) PRESS TO START AUTOCALIBRATION

F) WAIT



G) - AUTO-CALIBRATION COMPLETE



5. SETTINGS

MANUALLY



A) TIMING ADVANCE SETTINGS

6°



10°



8°



12°



B) LOAD SENSOR TYPE SETTINGS

- INCREASING



- DECREASING



C) IDLE SPEED THRESHOLD SETTINGS



USING A COMPUTER



6. PROBLEMS

1.



- INSTRUCTION

2.



- tel.: +48 857 438 154

3.



- www.ac.com.pl